

## P-08 Disassembly



With an unloaded magazine still in the pistol, cock it. Turn the disassembly lever down.



Remove the side plate and the magazine.



Let the action forward again, and holding the pistol upside down, slide the barrel and upper frame forward.







Remove the pin that holds the bolt assembly in the upper frame.



The bolt assembly now slides out.





