

DEUTSCHE WERKE AKTIENGESELLSCHAFT WERK ERFURT

THE ORTGIES PISTOL PATENTED IN ALL COUNTRIES

6,35 mm GAUGE = 7 SHOT 7,65 mm GAUGE = 8 SHOT



- Dissembling and assembling without any tools whatever, therefore easy cleaning.
- 4. All parts are interchangeable.
- 5. A stationary barrel, extra strong, insuring greatest accuracy.
- 6. Safety, through partly uncocking firing pin spring and also blocking sear. No other Pistol has these features.
- 7. The Pistol can be unloaded when the safety is set.
- When the Pistol is safe, it can be fired by grasping the handly firmly. In case of emergency, the owner does not have to think of unsafing the Pistol.
- 9. The Pistol cannot be safed when not cocked, as this is unnecessary.
- 10. Extremely easy cocking on account of flexible spring.

Fig. C Pistol when loaded, safed and cocked

DISMOUNTING AND REMOUNTING THE PISTOL

To dismount Locking Bolt (2). Remove magazine and any cartridge left in barrel. Pull the trigger to release the tension on the firing pin spring. Grasp pistol with right hand so that the thumb rests on safety, press same in as far as possible, grasp locking bolt with left hand, move back about $1^3/_2$ inches and lift off. See Figure E.

To dismount Barrel (5). Barrel can be removed by one quarter turn to left.

To dismount Grips (13, 14). Take the cleaning rod or similar instrument, insert same about 11/2 inches into the opening for the magazine,

Fig. D Pistol when unsafed and fired. The builtet starts on its way through the barrel and use it as a lever against the spring contained in frame. The grip on lower side will fall out by itself. Turn over and repeat operation. See Figure F.

To dismount Safety (6). After removing firing-pin (4) with attached firing pin spring (17) and guiding-pin (24) out of locking bolt, take firing-pin point and push lower pin (25) out of frame. Grasp frame with left hand, pressing in the safety ratchet (7) with thumb, then using the index-finger to press back safety as far as possible. The safety can then be removed easily with the thumb nail. See Figure G.

Removal of Sear (9) and Interceptor (10). Grasp the Sear with thumb and index-finger of right hand, press to the right and pull upward. See Figure H. The rest of the parts are easily dismounted. The assembling is done in reverse order.



Attention should be paid that all spiral springs are so placed that the narrow ends fit round the respective parts (barrel, guiding pieces etc.) whereas the wider ends belong in their recesses.

To Fill Magazine (15). While pressing down the follower (15b) insert the cartridges in the magazine so far that they press against the backwall below the curved edges of the open part of the Magazine (Fig. L). After filling the magazine take the cleaning rod and press down the top cartridge till a resistance is felt, be sure that they are placed in the right position, one cartridge uniformly upon the other.

How to use the Pistol. The loading and unloading of the pistol is done in the same manner as with most automatic pistols. It is better not to load a cartridge into the barrel, except when intended or immediate use.

Fig. G Removing Safety As soon as a cartridge is in the barrel the pistol must be safed, this is done by pressing upon the button of the safety, on the left side of the pistol (7) with the thumb, and can be plainly heard. When safed, the firing pin spring is partly released. No other automatic pistol has this feature. The firing is done by grasping the grip tightly, consequently the pistol is ready for use while still safed.

By special desire a double safety can be affixed, the catch must then be removed by pressing a conveniently placed button.

To keep the Pistol in good condition. The Ortgies Pistol is an arm of precision of the highest quality, and as such, wants the same care as any other arm of precision to insure reliable operation. Where the pistol is carried in the pocket daily without a case, it is necessary to clean it at short intervals by taking off locking bolt, drawing with the aid of the cleaning rod, a soft rag through the barrel, wiping clean and re-oiling.

Fig. H Removing Sear and Interceptor

When the pistol has been fired, the barrel ought to be cleaned as soon as possible and all traces of the powder residue removed. Any of the well known solvents will answer the purpose.

In regard to test we should like to mention that the accuracy of all pistols, as they come from the works, is regularly and most carefully examined. Certain numbers are picked out and tested with 1000 Shots and more during which time they are frequently taken apart and at the end of the test there is no deviation whatever. We consider this an excellent result.

Its shooting accuracy, its extreme simplicity, its perfect interchangeability of parts, its safety device etc. make it one of the best pistols on the market.

Fig. K Replacing Firing Pin Spring Before replacing locking holt, it is necessary to insert the firing pin spring with guiding pin into its recess. This is done either with the end of

the cleaning rod, a key or similar utensil. See Figure K

The high efficiency of the Ortgies Pistol is proved by the fact, that at all principal German Pistol Shooting Competitions during 1921 our Cal. 7,65 (32) has won more than 70% of the prizes and at the Champion Shooting Competition at Halensee on September 26th. the Champion Mr. Jänich used the Ortgies Pistol.

Fig. L Filling of Magazine

COMPONENT PARTS OF THE ORTGIES PISTOL

1. Frame 2, Locking Bolt 8. Extractor 4. Firing Pin 5. Barrel 6. Safety 7. Safety Ratchet 8. Handle Holder 9. Sear 10. Interceptor 11. Trigger 12, Magazine Holder 18. Left Handle Grips 14. Right Handle 15. Magazine 15b Follower

- 15c Follower Spring
- 16. Recoil Spring
- 17. Firing Pin Spring
- 18. Safety Spring
- 19. Spring for Magazine and Handle Holder (
 - le riolder (
- 20. Sear Spring
- 21, Extractor Spring
- 22. Trigger Spring
- 23. Interceptor Spring
- 24, Guiding Pin
- 25. Safety Pin
- 26. Extractor Pin
- 27. Trigger Pin
- 28. Pin for Magazine Holder
- 29. Guiding Pin for Trigger Spring



Useful Information about the Ortgies Pistol

Gauge	6,85	7,65 mm
Total length of the pistol mm	132	163
Height	87	112
Thickness	19	22
Weight of the pistol with empty magazine gr	875	610
Weight of the pistol with full magazine gr	415	675
Powder charge	0,15	0,20
Weight of bullet	8,25	4,60
Pressure of gas	10,25	9,82
Velocity of bullet 12,5 m before muzzle ms	255	815
Energy of built 12,5 m before muzzle	10,8	23,3
Elevation of 100 m trajectory to 50 m distance cm	16	18
Penetration in dry Pine hoards (crossbar) at a distance of 25 m	7	7
Penetration in dry Pine boards (crossbar) at a distance of 50 m	6	61/2

Useful Information about the Ortgies Pistol Gamme 0.00

7.65 mm

		Gauge	0,30	6,00 mm	
booting accurac	ty by a distance of 25 m.	Height cm Breadth "	10 8	6 5	
hooting accurac	ty by a distance of 50 m	Height cm Breadth "	Ξ	14 11	
nooting accurac	ry by a distance of 75 m	Height cm Breadth "	Ξ	23 20	
nooting accurac	y by a distance of 100 m	Height cm Breadth "	1	88 80	
Shooting ranges in meters by elevation angles of					
Jauge 6,35 mm " 6,35 " " 6,35 " " 6,35 " " 6,35 " " 6,35 " " 6,35 "	10° 600 m 12° 675 " 14° 725 " 16° 750 " 16° 700 " 18° 650 "	Gauge 7,65 mm " 7,65 " " 7,65 " " 7,65 " " 7,65 " " 7,65 " " 7,65 "	10° 14° 18° 22° 26° 28° 30°	800 m 925 " 1050 " 1150 " 1200 " 1200 " 1000 " 750 "	
	Greate	st range	200000	111112	
A REAL PROPERTY OF A REAL PROPER	by an elevation angle of 1	50		750 m	
auge 7,65 mm b	y an elevation angle of 2			1200 m	

7224. 805. 22. 50.